
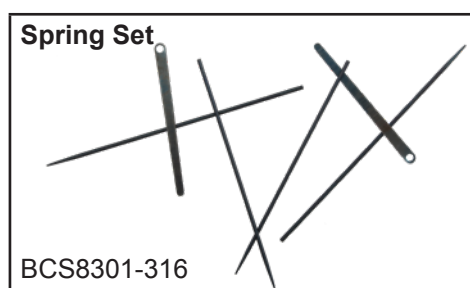
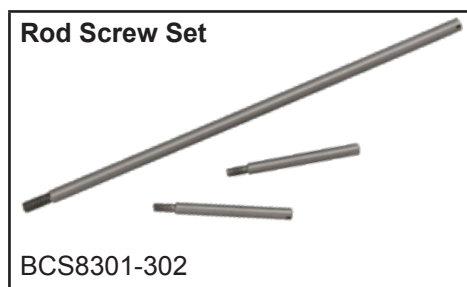
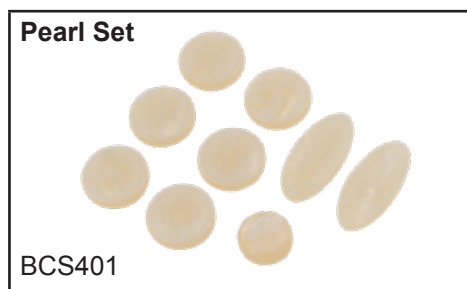
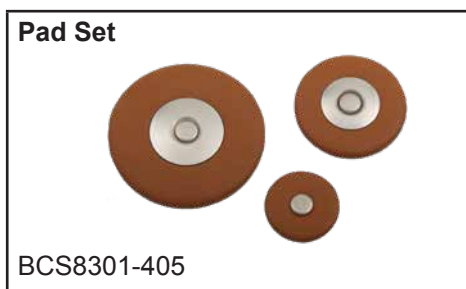


Alto Saxophone

BC8301-1

Spare Parts and Accessories

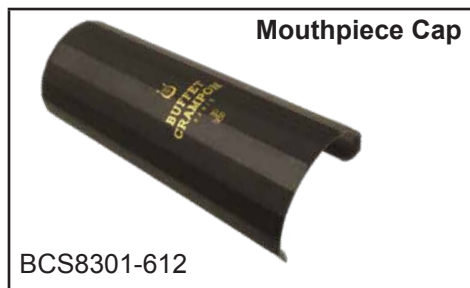

Alto Saxophone (continued)

BC8301-1

Spare Parts and Accessories



Left Hand Thumb Rest



BCS8301-404

Bell Brace



BCS8301-106-1

Brace Screws:



Bell Side (long)
BCS8301-3091-1


Body Side (short) (x2)
BCS8301-3092-1

Thumb Rest Hook



BCS8301-110

Thumb Hook Washer



BCS8301-111

Thumb Hook Screw



BCS112L

Right Hand Key Guard



BCS109L

Eb = C Key Guard, with Bumper



BCS107L

B/Bb Double Key Guard, with Bumpers



BCS8101-108L

Key Guard Adjusting Screw, with Felt Bumper



BCS313L

Large Felt Bumper D10



BCS403

Keyguard Screw



BCS8102-318L

Neck Strap




BCS500

Strap Ring



BCS8301-120-1

Pull-through



BCS8301-640

Case



BCA8301

Case Strap



BCS8301ST
(2 needed)

Hard Case



BCA8301HC

Hard Case Strap



BS210HCST
(2 needed)